

**INSTALLATION INSTRUCTIONS**



**ELECTRICAL SHOCK HAZARD**

**READ, UNDERSTAND, and FOLLOW** these instructions before installing the equipment.

**WARNING**

Disconnect the Electrical supply power at the service panel (fuse or circuit breaker box). Failure to do so could result in serious injury or death. Only qualified electricians should install this fixture and the installation MUST conform to the Canadian Electrical Code Part I and all local codes and ordinances. Ensure that only proper tools, materials, and equipment are used to complete the installation.



**SAFETY**

- Proper grounding is required to ensure personal safety.
- Fixture should be mounted in locations where unauthorized personnel will not readily subject it to tampering.
- Do not use this equipment for anything other than its intended purpose.
- Servicing this equipment should be performed by qualified service personnel.
- Save these instructions.

**INSTALLATION**



1. Attach the surface/ceiling mount bracket to the ceiling using appropriate anchor and the screws. Please refer to local building code for anchor and the screw size requirements. [1]

(Dimensions of the surface/ceiling mount bracket are shown in [2])

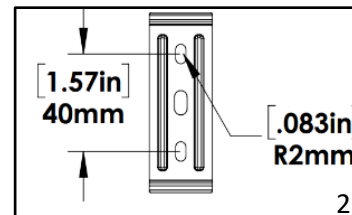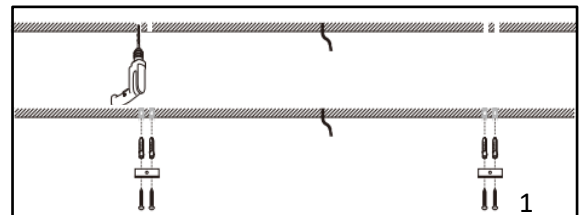


2. Detach the housing and lens (including the LED board) by opening up the clips. [3] [4]

Please keep the Lens and LED board assembled. Standard installation does not require separation of LED board from the lens.

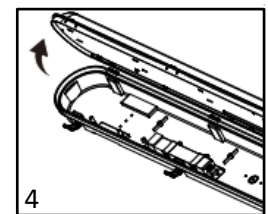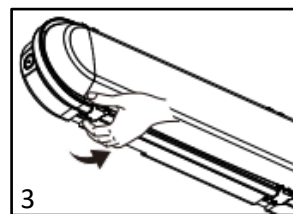


3. Press the housing of the fixture to the surface/ceiling mount bracket. They should clip together and hold. Use appropriate conduit entry and connectors. [5]
4. Wire according to the wire diagram on page 3.

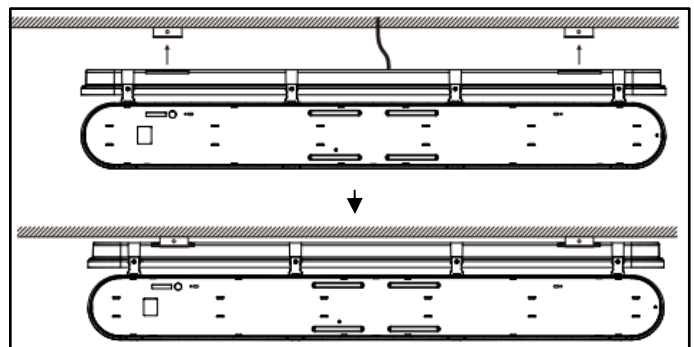


**INSTALLATION INSTRUCTIONS**

 - Close all the clips to secure the lens (including LED board) to the housing. [6]







**DETACHING LENS/LED BOARD FROM HOUSING (OPTIONAL)**

- Open up the clips.
- Detach the Lens (including LED board) from the housing by:
  - Remove the wire connectors (Orange).
  - Detach the Ground wire (Green) from LED driver.
  - Detach the support cables.
- Re-attach the Lens (including LED board) from the housing by:
  - Re-attach support cables.
  - Re-attach the Ground Wire (Green) to the LED driver.
  - Reconnect the wire connectors (Orange).
- Close the clips back.

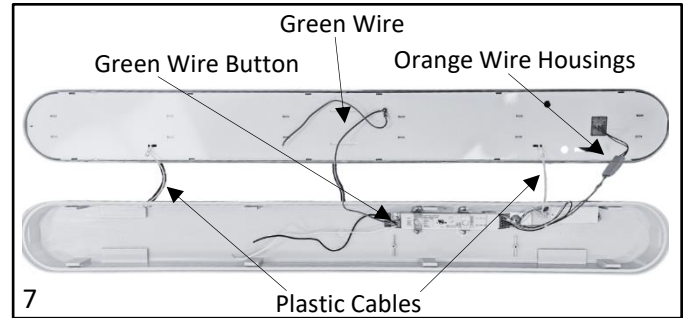

**CCT AND WATTAGE ADJUSTMENT**

- Remove the safety cover from the LED Driver to access the CCT and Wattage Select switches.[8]
- Move the switch shown to adjust the power. Default is highest wattage setting. [9]
- Move the switch shown to adjust the CCT. Default is 4000K. [10]
- Put the cover back when finished. [11]

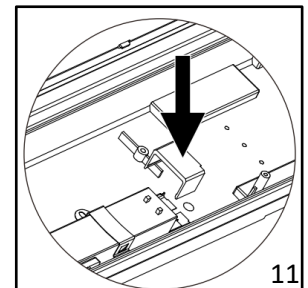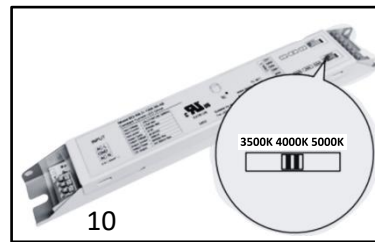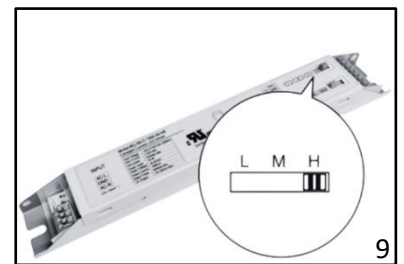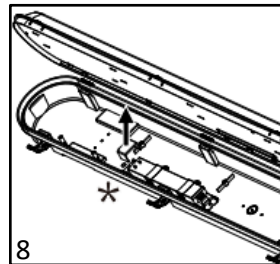

**WIRING**

- Check that the line voltage is correct.
- Connect fixture **GROUND** (green) wire to power supply **GROUND** (green) wire.
- Connect fixture **WHITE** wire to power supply **NEUTRAL** wire.
- Connect fixture **BLACK** wire to power supply **LINE** wire.
- The fixture includes 0-10V dimming functionality, connect **GREY** or **PINK** and **VIOLET** wires to a 0-10V dimming controller (optional).

