

## INSTALLATION INSTRUCTIONS



### ELECTRICAL SHOCK HAZARD

**READ, UNDERSTAND, and FOLLOW** these instructions before installing the equipment.

### WARNING

Disconnect the Electrical supply power at the service panel (fuse or circuit breaker box). Failure to do so could result in serious injury or death. Only qualified electricians should install this fixture and the installation MUST conform to the local electrical code and all local codes and ordinances. Ensure that only proper tools, materials, and equipment are used to complete the installation.


### SAFETY

- Proper grounding is required to ensure personal safety.
- Fixture should be mounted in locations where unauthorized personnel will not readily subject it to tampering.
- Do not use this equipment for anything other than its intended purpose.
- Servicing this equipment should be performed by qualified service personnel.
- Save these instructions.
- **MIN 75 °C SUPPLY CONDUCTOR**

## INSTALLATION





### Knuckle:


1. Knuckle mount is installed as standard on this fixture.
2. Loosen the adjusting bolt, align the fixture to required angle. Tighten adjusting bolt after the angle is confirmed.[1]  
**Note: Adjustable angle is 180°.**

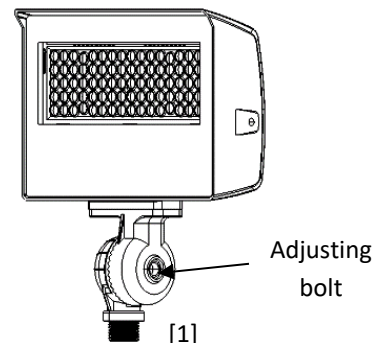

### Yoke:


1. Remove knuckle bracket and mounting screws on the fixture as shown. [2][3]
2. Install the yoke on the fixture as shown. [4][5][6]
3. Make the wiring connections as per diagram below. Install the yoke onto chosen mounting location.
4. Loosen the adjusting bolts, align the fixture to required angle. Tighten adjusting bolts after the angle is confirmed.[7][8]  
**Note: Adjustable angle is 180°.**

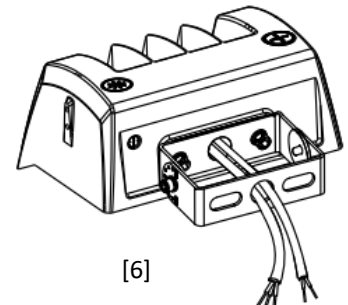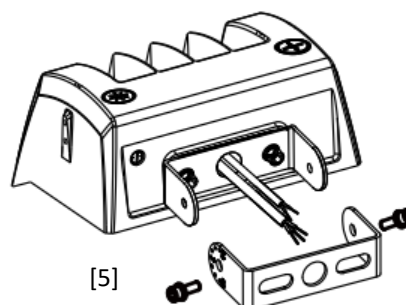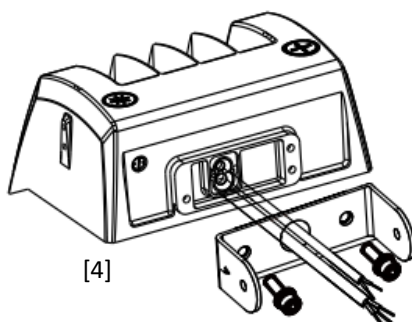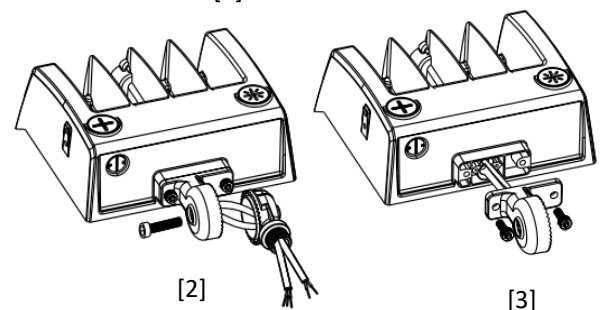

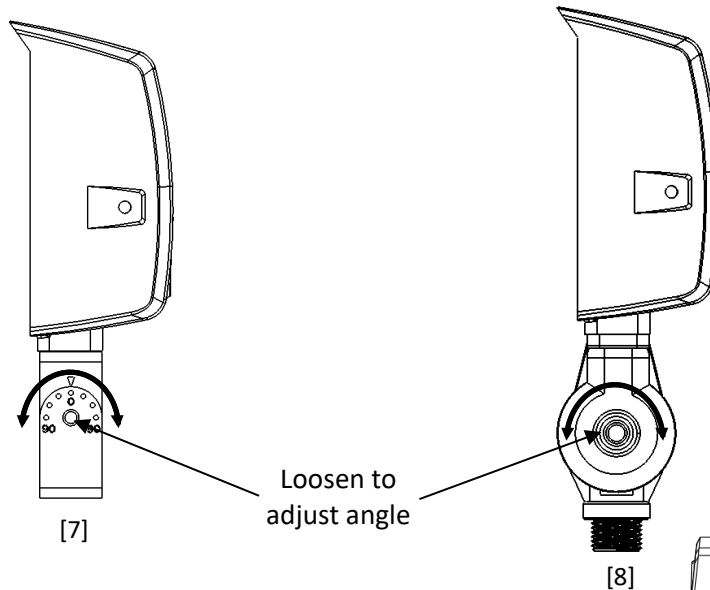



**Adjustable optics:**

1. Using the provided tool [9], turn the slot on the top of the fixture to adjust the beam distribution from Extra Wide (7x6), to Wide (6x6), and/or to Medium Wide (5x5). [10]

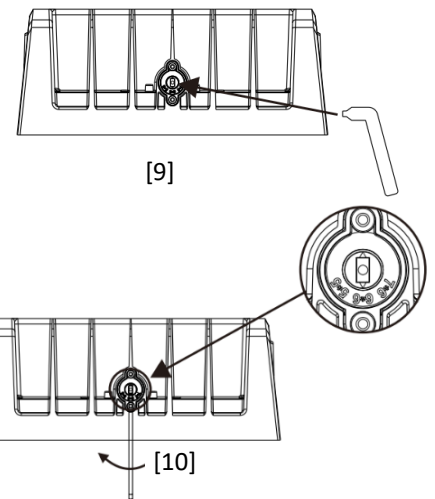


**CCT, Wattage Select, Photocontrol:**

1. Remove the screw cap (shown on the left in the image) to reveal CCT and Lumen switches [13]. Fixture is set to highest wattage and **4000K** standard.
2. Remove the screw cap shown on the right in the image to reveal the Photocontrol sensor and switch [12]. Photocontrol is set to **ON** as standard.

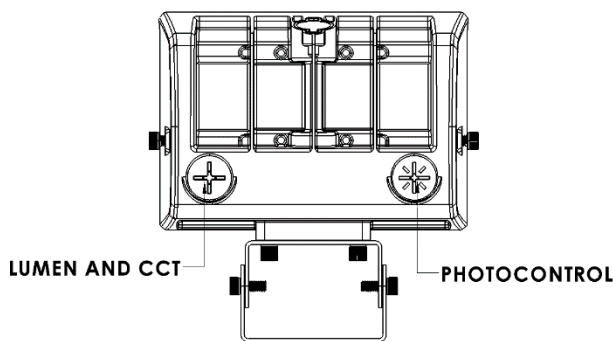

photocell controller  
[12]



Color and power controller  
[13]

**WIRING**

- Check that the line voltage is correct.
- Connect fixture **GROUND** (green) wire to power supply **GROUND** (green) wire.
- Connect fixture **WHITE** wire to power supply **NEUTRAL** wire.
- Connect fixture **BLACK** wire to power supply **LINE** wire
- The fixture includes 0-10V dimming functionality, connect **PINK** and **VIOLET** wires to a 0-10V dimming controller (optional).

SUPPLY	HOT	BLACK	LIGHT FIXTURE
	NEUTRAL	WHITE	
	GROUND	GREEN	
0-10V DIM		PINK	
		VIOLET	